

Programming Guide for Acenti Dimmers and Quiet Fan Speed Control

I. DIMMER PROGRAMMING


ACENTI DIMMERS PROVIDE THE FOLLOWING ADVANCED PROGRAMMING FEATURES:

- **Minimum Brightness**—Set the minimum brightness level that the lights can dim to prior to turning fully OFF.
- **Dim-Lock**—Set the brightness level that the lights turn ON to regardless of the previous light level at which they were turned OFF.
- **Fade Rate**—Set the amount of time (in seconds) that the lights will have to turn ON or OFF. Fade rates can be set to one of five different settings.

Applicable Cat. Numbers –

ACIO6, ACM06, ACM10, ACE04, ACE06, ACX10 and ACH08

Advanced Features Summary			
Mode	Description	Range	Default
1	Set Min. Brightness	1-50%	25%
2	Set Dim-Lock Level	0-100%, 0=no lock	0
3	Select Fade Rate	1, 2, 3, 4 or 5	Preset #1

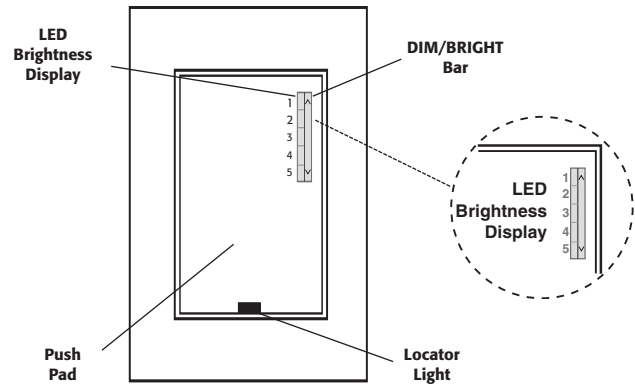

TO PROGRAM:

NOTE: Have a flashlight handy if this dimmer controls the only light source in the room.

1. Gently pull the bottom of the push pad forward until the bottom of the pad slightly lifts off the strap to engage the air-gap switch on the dimmer only and wait for 5 seconds.
2. Press and hold push pad for 7 seconds until the locator light starts blinking. The top LED (LED 1) in the brightness display will also start to blink.
3. Upon releasing the push pad, the locator light will indicate that the dimmer is in Set Minimum Brightness mode (Mode 1) by blinking once per second.
4. To change the current **Minimum Brightness** level, use the DIM/BRIGHT Bar to choose the level desired from 1-50%. When adjustment is made, the setting is automatically saved. Tap the push pad and the locator light will blink twice per second to indicate that it is now in the Set Dim-Lock Level mode (Mode 2).
5. To change the current **Dim-Lock** level, use the DIM/BRIGHT Bar to choose the level desired from 0-100%. If the Dim-Lock feature is not desired, press and hold the down arrow until no LED is lit. When adjustment is made, the setting is automatically saved. Tap the push pad and the locator LED will blink three times per second to indicate that it is now in the Set Fade Rate mode (Mode 3).
6. The LED Brightness Display is separated into 5 segments. To change the current **Fade Rate**, use the DIM/BRIGHT Bar to move the LED to the desired preset. Preset 1 is the LED closest to the top and Preset 5 is the closest to the bottom (**refer to chart for settings**). When the adjustment is made, the setting is automatically saved. Tap the push pad to exit the programming mode.


Note: The device will exit the programming mode by either completing the programming sequence or 3 minutes after any button press while in the programming mode.

Fade Rate Presets			
Preset	LED**	Fade On	Fade Off
1*	1	Approx. 1.5s from full off	Approx. 3s from full on
2***	2	No Fade	No Fade
3	3	No Fade	Approx. 3s from full on
4	4	Approx. 1.5s from full off	Approx. 5s from full on
5	5	Approx. 1.5s from full off	Approx. 10s from full on

* Default setting

** LED #1 is on the top

*** The Press and Hold feature for the 10-second Delayed-OFF is disabled in this Preset

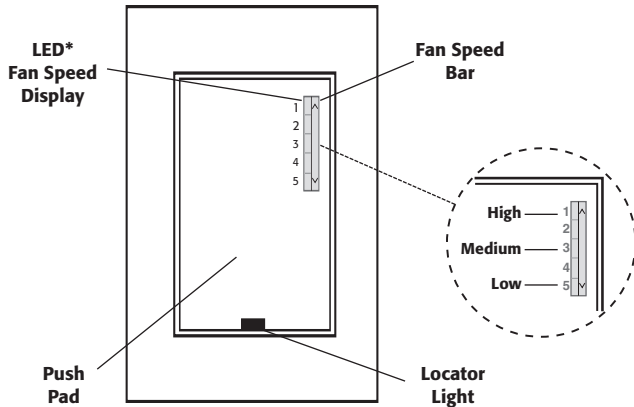

II. QUIET FAN SPEED CONTROL PROGRAMMING

THE ACENTI QUIET FAN SPEED CONTROL PROVIDES THE FOLLOWING ADVANCED PROGRAMMING FEATURE:

- **Speed-Lock**—Set the fan speed the fan will turn ON to regardless of the previous fan speed at which it was turned OFF.

Applicable Cat. Number – ACF01

Advanced Features Summary		
Description	Range	Default
Set Speed-Lock Level	0-100%, 0=no lock	0

TO PROGRAM:

1. Gently pull the bottom of the push pad forward until the bottom of the pad slightly lifts off the strap to engage the air-gap switch on the fan speed control and wait for 5 seconds.
2. Press and hold push pad for 7 seconds until the locator lights start to blink.
3. Upon releasing the push pad, the locator light will indicate that the fan speed controls is in Set Speed-Lock mode by blinking twice per second.
4. To change the current **Speed-Lock** level, use the Fan Speed Bar to choose the level desired from high (LED 1), Medium (LED 3) or Low (LED 5). If the Speed-Lock feature is not desired, press and hold the down arrow until no LED is lit. When adjustment is made, the setting is automatically saved. Tap the push pad to exit the programming mode.

Note: The device will exit the programming mode by either completing the programming sequence or 3 minutes after any button press while in the programming mode.